

Float Wall Sconce
UL Supplementary
Installation Instructions






1. Mount 4.0 or 3.5 (square or octagon) JBox flush to stud and provision 90C wire (Hot, Neutral, Ground).



2. Attach supplied mounting plate to Jbox.

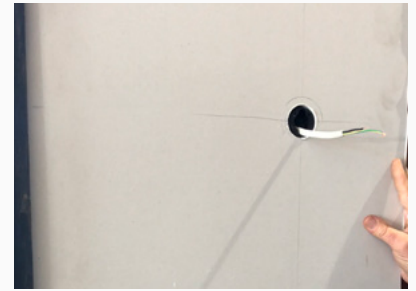

3. Cut drywall to fit around mounting plate.



4. Apply 'filler' to build up surface around mounting plate; leave fixing points exposed. Allow 'filler' to cure and sand.




5. Carefully unscrew grub screws and remove wall block caps from fixture, top and bottom.



6. Connect power wires to fixture and push excess back into JBox.



7. Secure one screw of top mounting block to corresponding mounting plate fixing point.

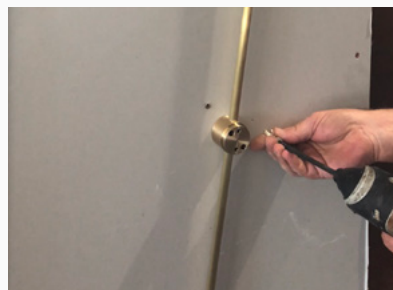

8. Align fixture to vertical and mark lower mounting block fixing points. Secure all four fixing screws. Take care not to overtighten, causing filler and/or wall surface to be damaged.



9. Refit wall block caps. Fit shade.

Installation Notes

- Take care with the positioning of JBox and mounting plate. Leading face of mounting plate should be flush with wall surface or slightly (not more than 1/4") behind wall surface when secured.
- Take care the wall area where the fixture is to be fitted is flat, otherwise distortion/ bending of rod may result.
- Where site wall material does not facilitate above installation approach, it may be necessary to source suitable escutcheons. Available from Articolo Lighting.